

1858 Remington Cylinder Pin Quick Release



1. Remove loading lever from the frame. The loading lever is kept in place by the screw located on the left side of the frame. Remove the single screw with a flat screw driver. Do not lose screw; it will be needed again to finish installing 1858 Remington Cylinder Pin Quick Pin Release.
2. Once loading lever and cylinder pin are removed, look inside of the frame opening where the loading lever was before and see if any burrs are present. If none, proceed to next step. If there are burrs present, remove them. (Fig.1)



3. Drop spring and plunger into plunger hole. (Fig.2)



4. Position as shown in picture with tail end visible in the frame opening. Slowly slide straight back until the hole lines up with the frame hole. Place screw back into hole and screw together. (Fig.3)



5. Once assembled if the lip is not in front of the cylinder pin (Fig.4), you will need to remove material from the bottom of the 1858 Remington Cylinder Pin Quick Release. Remove material slowly because if too much material is removed the plunger and spring will drop out.



6. To extend the life of the spring, push cylinder pin back into the frame. It is now in a secured position.
7. For problems/questions, please call 608.676.2518 or email us at info@howelloldwestconversions.com.